

## Using the FrameSecure® Metal Frame Security System with a TrackMaster™ Picture Hanger

1. Install your frame as usual using a TrackMaster™ Picture Hanger *without using the bottom rail supports*. Remove frame from wall. For even more security, use screws and anchors to attach the TrackMaster™ Picture Hanger to the wall.
2. Insert hole locator pins into hangers as shown. These pins will be used to make marks in the wall for the anchors
3. Place FrameSecure® with locator pin pointing out into the metal frame rail bottom corners, at least 2" in from the sides. Rotate FrameSecure® to lock it into position. (on very small frames, only use one)
4. Hang frame on the TrackMaster™ Picture Hanger again, adjusting the side-to-side position to the right placement.
5. Mark the hanger locations on the wall by "whumping" the frame at the corners. On concrete walls, place a piece of masking tape where the locator pin makes contact. The pin will make a dimple.
6. Attach the hangers to the wall with the included screws and wall anchors, positioned as shown.
7. Place frame back onto the TrackMaster™ Picture Hanger. The FrameSecure® fits into the metal frame rails. Rotate the FrameSecure® into the locked position,

